


1-435 / 1-436 / 1-437-20


Draghuv för utsugsbord

1200x800

1600x800


2000x800

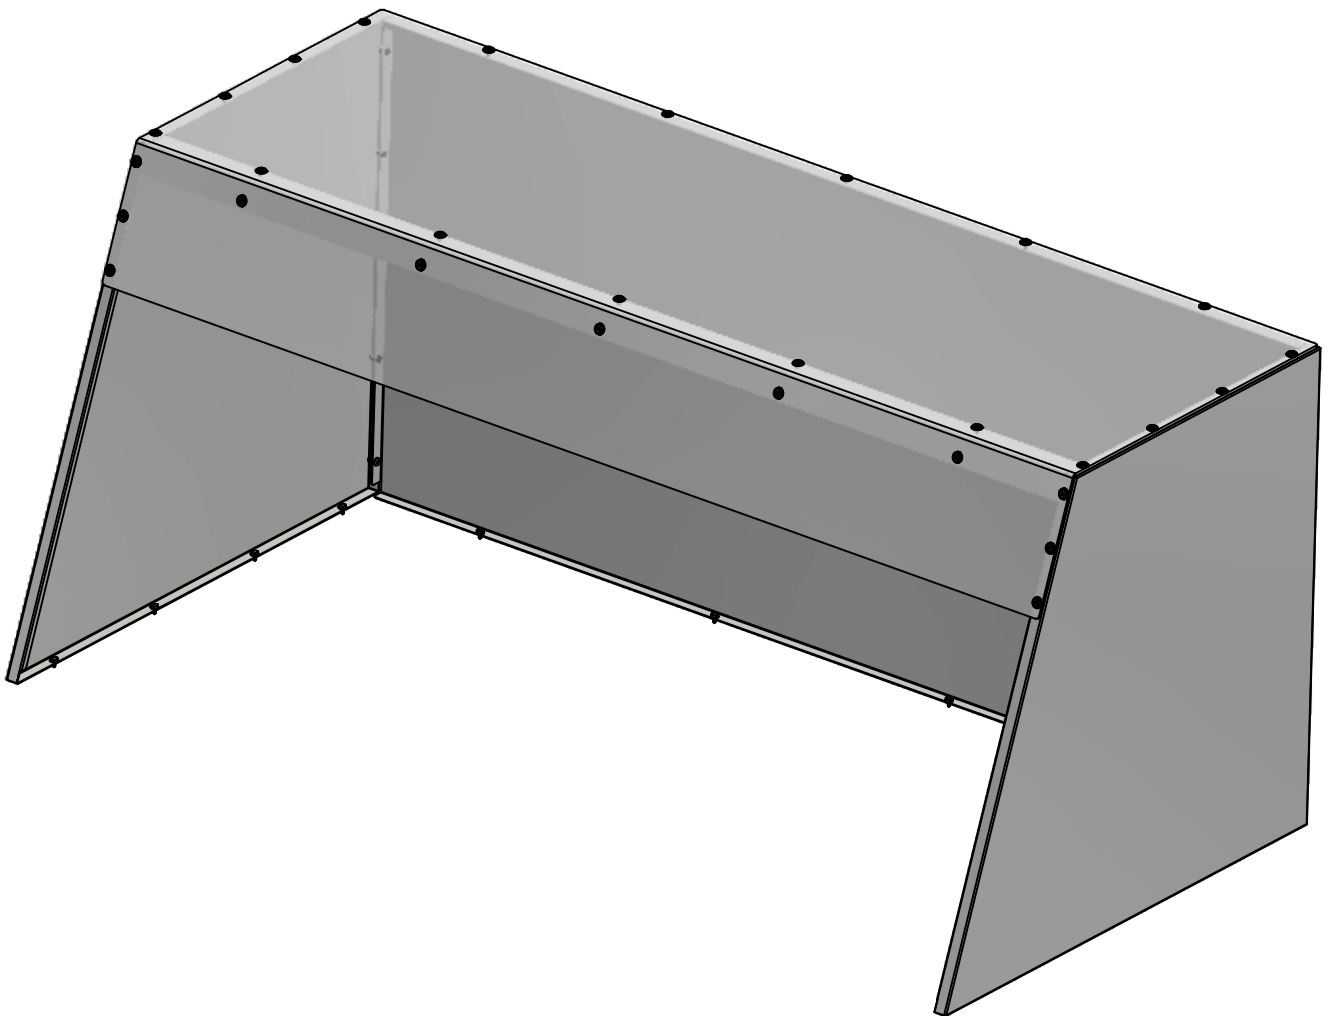

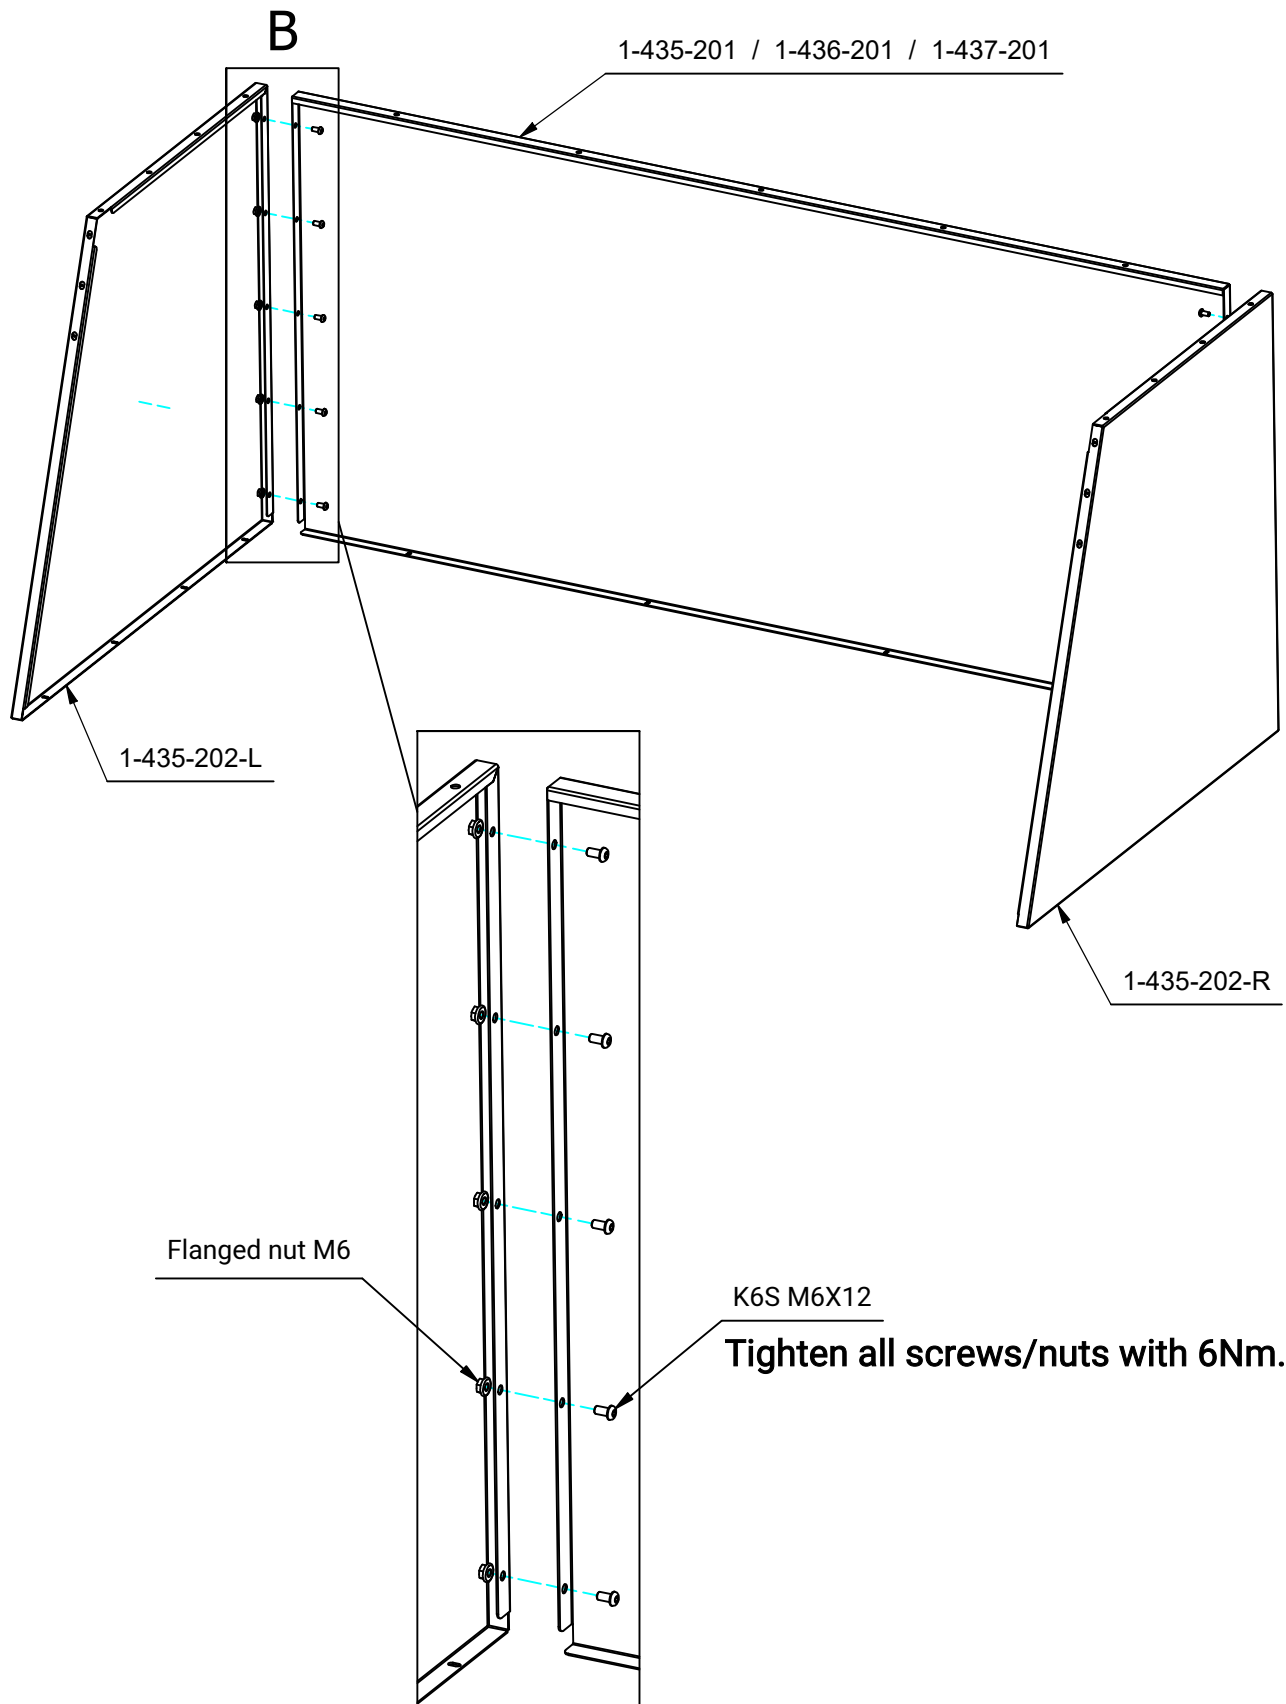


1-435-204 / 1-436-204 / 1-437-204

Leave this row without screws

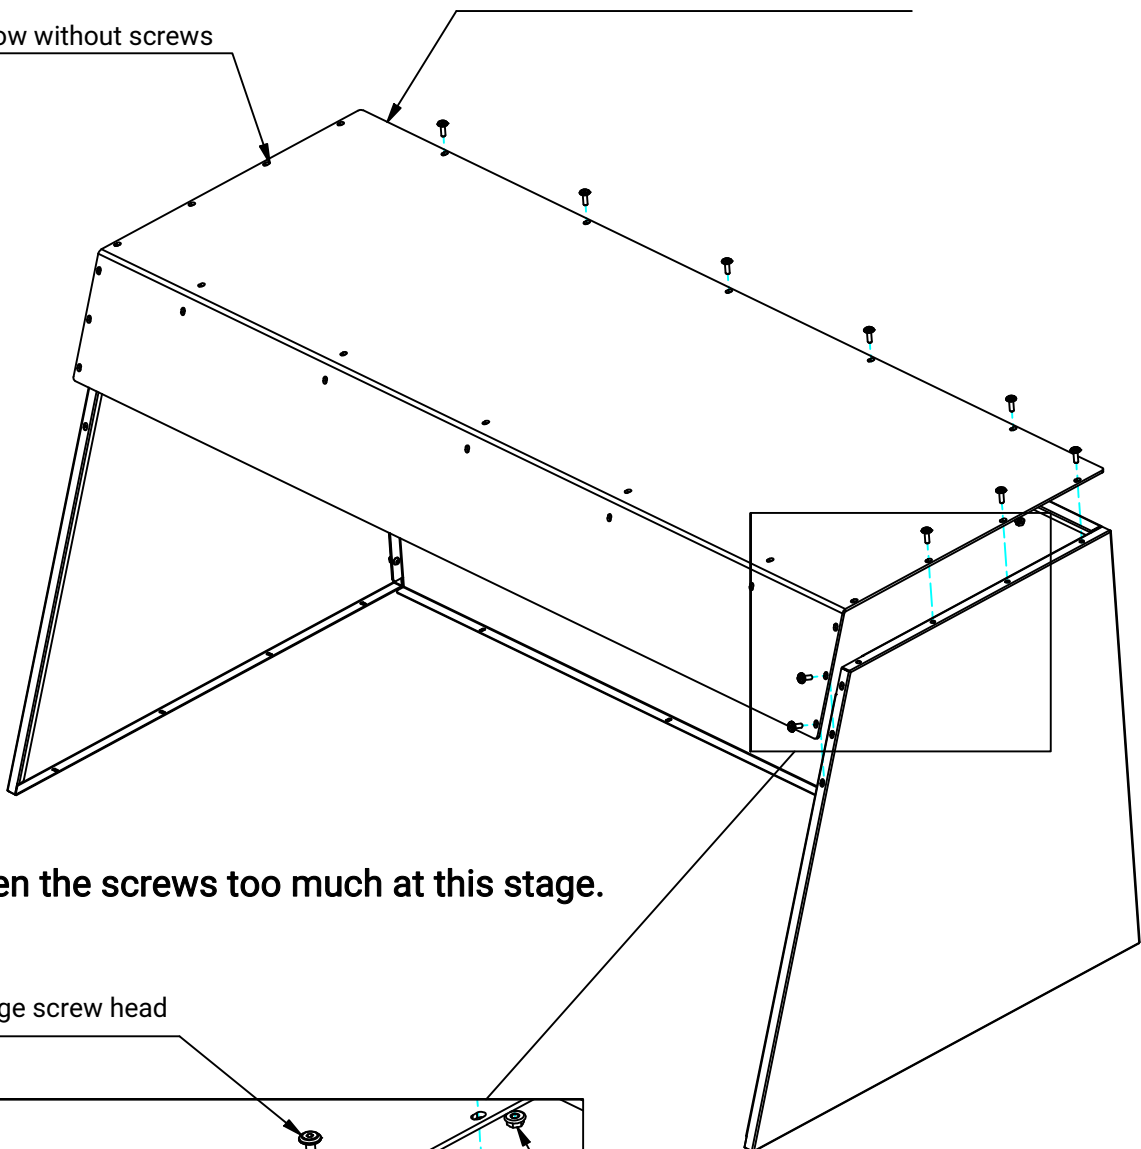**Do not tighten the screws too much at this stage.**


K6S M6x20 Large screw head

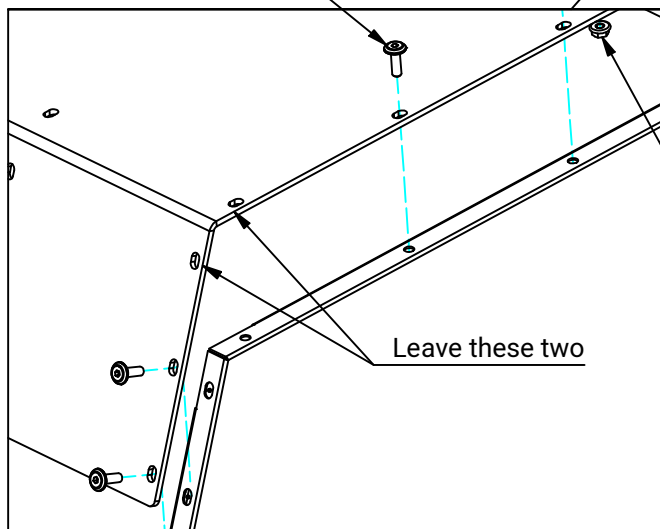


Flanged nutM6

Leave these two


1-435-203 / 1-436-203 / 1-437-203

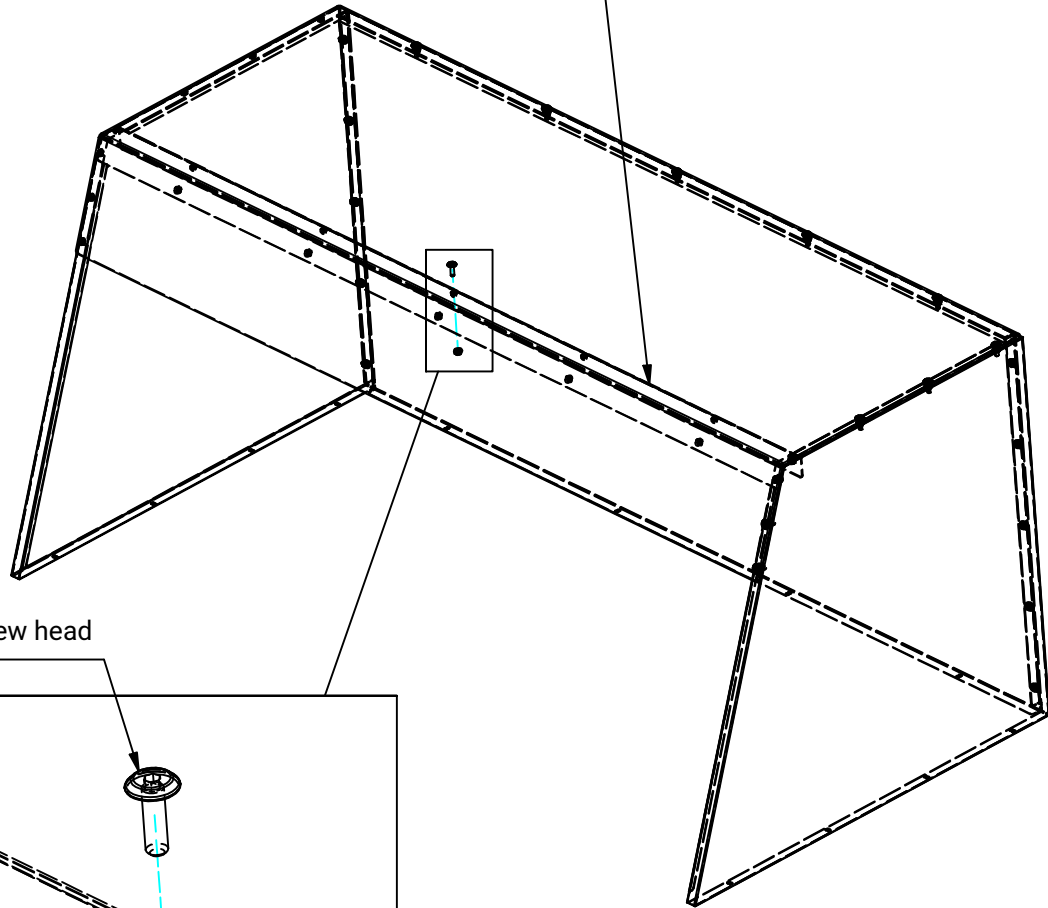

K6S M6x20 Large screw head

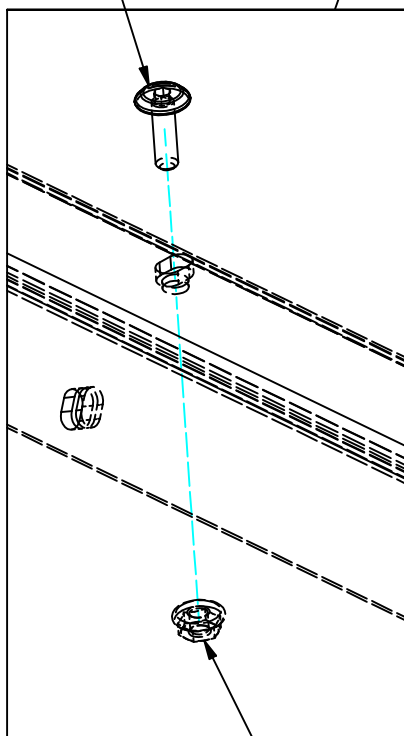

Flanged nut M6

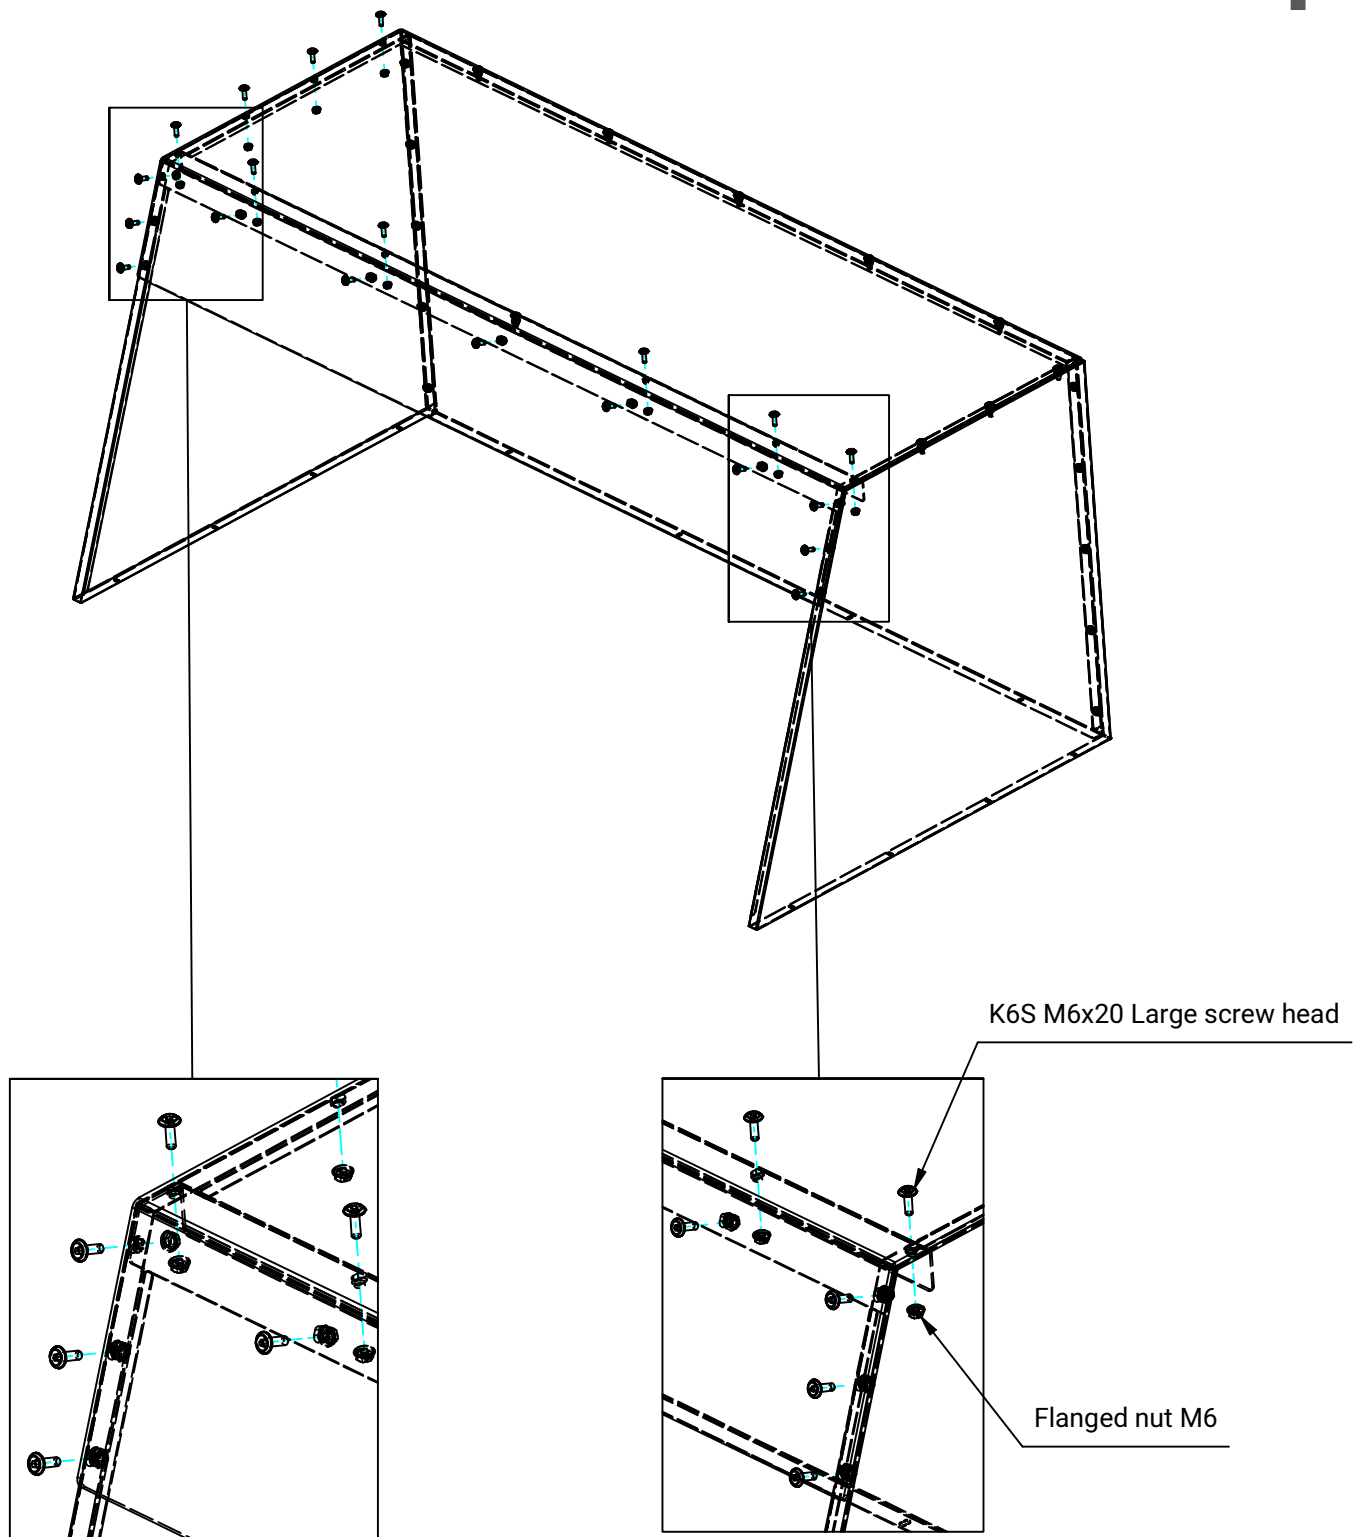

Tighten all screws/nuts with max 5nm in this step.

